

### 1. Download APP

Download "My Livoltek" App:

The App is available on Google Play Store(Android) and App Store(IOS).

You can scan QR code to download it on your phone.



### 2. Wi-Fi Dongle preparation

Make sure your Wi-Fi module is installed on the inverter and running well. The details refer the Part 7 of 'APP User Manual' delivered with the product.module

### 3. Communicate with your inverter via APP

**STEP 1**  
Open the App and enter the homepage.  
Click 'Local mode' .


**STEP 2**  
Click 'BlueTooth Mode' in the list.

**STEP 3**  
Choose your advice.  
( A few tail numbers of SN are device' s name. )

**STEP 4**  
Enter your device status page.  
Click button on upper right corner

**Settings page**  
Now, you can set initial parameters here.

### 4. Initial parameter Settings

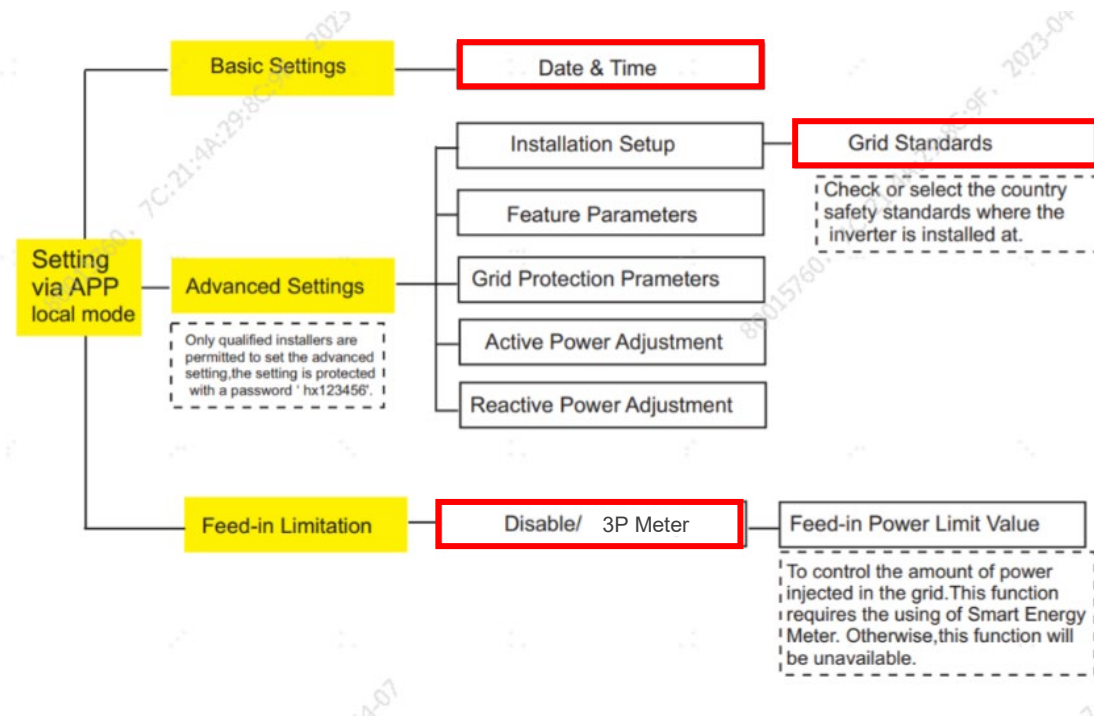

**Date & Time**  
Set your time or synchronize with phone.

**Set the grid standard**  
Enter the advanced settings by password 'hx123456' if needed.  
Select your country region in "Grid Standards" box.

**Feed-in Limitation Settings**  
Firstly, select the correct control method '3P Meter' and click 'Confirm' button. (Factory default settings is 'Disable', and this function requires the smart meter installed.)  
Then, set "Feed-in Power Limit" parameter. You can set 0 to avoid power exported to grid.

**Feed-in Limitation Settings**  
Firstly, select the correct control method '3P Meter' and click 'Confirm' button. (Factory default settings is 'Disable', and this function requires the smart meter installed.)  
Then, set "Feed-in Power Limit" parameter. You can set 0 to avoid power exported to grid.